



### **Bootlock fitting is quick and easy:**

1. Loosen the screw on the Bootlock, place it around the boot (trunk), hatch, or door pin, and tighten the screw securely to prevent the Bootlock from detaching.
2. Shut the boot or door and securely engage the boot latch into the hooped end of the Bootlock.
3. You can now operate your vehicle's locking system as usual.
4. To remove the Bootlock, simply unlock your vehicle and press the boot release button or lift the boot release handle to disengage the Bootlock from the boot latch.
5. Loosen the screw from the boot or door pin and store it in a safe place for future use.

**IMPORTANT:** Unlocking your car with a key or your keyless fob will only unlock the Bootlock, it will not release the Bootlock from the latch. If you normally have to lift a handle to open the back doors or tailgate of your vehicle, then you must follow the same process to remove the Bootlock: unlock the vehicle and then lift/open your door handle to release the Bootlock from its position. We highly recommend watching the demonstration video.

See the photos on the next page.

