


WING JUMP

Care of your Wing Jump

- 1.) To keep your wing jump looking good for years try to keep it out of direct sunlight when not in use. It is UV protected but all plastic will break down over time.
- 2.) You can clean your jump with most household cleaners. Harsh abrasives can scratch and damage the surface finish of the jump.
- 3.) When storing the jump take care to check that the flexible jump cups are not being pushed into a bent position. Over time this could cause the cup to become bent.
- 4.) Exposing your jump to extreme heat may cause damage. Avoid temps over 125 degrees F. High temps may cause warping.

Jump Assembly

- 1.) Turn the jump upside down
- 2.) Insert the tab on the foot into the pocket closest to the jump cups.
- 3.) Press down firmly and snap the foot into position
- 4.) Feet can be removed for storage

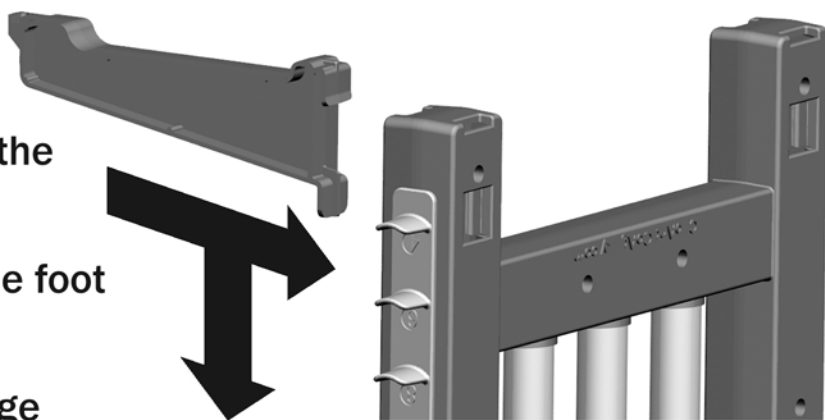

Please direct any question about your new Clip and Go Agility Wing Jump to:

