

Clip and Go Agility

Dog Walk

Assembly Instructions

WARNING

Failure to follow these
step by step instructions
may cause problems with
raising and lowering your
new Dog Walk




Height Clip




Step 1:

Position each of the upper legs upside down on the ground and install the height clips as shown.

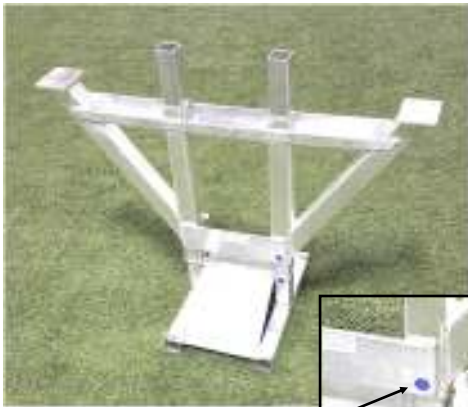

Color dots must be aligned

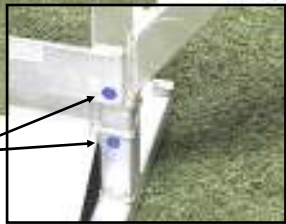

Step 2:

Slide the lower leg over the standing tubes of the upper leg as shown. Make sure the color dots are matched together. (blue to blue and red to red)



Height Adjustment Knobs

Step 3:

Install the 4 height adjustment knobs and tighten.

Note: These are designed to stiffen the leg assembly. Make sure you always use the Height Clips, they are what holds the dog walk up.



Step 4:

Place each of the leg assemblies inside the center plank. Make sure the dots and labels are facing toward the center of the dog walk. You may need to spread the sides of the plank apart to make the leg fit. Look for the slotted holes on the outside of the plank. Align the threaded hole



in the leg with the hole in the plank and insert the 3/8" bolts and washers. You may need to use a rubber mallet to bump the leg around until it lines up. Make sure all bolts are tight.



Step 5:

Attach each of the wheels. Using the (16) 1/4" bolts and nuts, secure the swivel wheels as shown.



Step 6:

Make certain you have tightened each of the Height Adjustment Knobs and then flip the center plank assembly over onto its wheels.



Step 7:

Make certain the wheels are in their UNLOCKED position. Raise each end of the dog walk to its full height. This is a two person job. One person can lift while the second person inserts the height clips into the desired location. You may need to place a foot on the bottom cross bar of the leg to hold it down while lifting.



Once everything is at full height, tighten the Height Knobs and lock the wheels.



Step 8:

Add each of the down planks using the 1/2" hinge pins.



Step 9:

Place the end of the Plank Brace between the two Leg Uprights, then push the white clips onto the pivot tube on the bottom of the end plank. The clips may be tight the first time you try this, push hard.



Using the "s" hook that's attached to the cord, hang the brace by hooking it onto the leg brace support. Hanging it will prevent it from vibrating and making noise when the dog is running across.

